

Proper shifting can prevent damaging the engine and transmission.

Upshifting

The upper limit speed of each gear is shown in gear range (page 17).

Upshift to a higher gear before exceeding the upper limit speed.

Upshifting at speeds higher than the upper limit speed can cause damage to the engine.

Downshifting

Downshifting at speeds higher than those in the table below may overrev the engine and can cause damage to the engine and transmission.

Follow the table below when downshifting the gears.

Downshifting Acceptable Speed	
4th → 3rd	90 km/h (56 mph) or less
3rd → 2nd	65 km/h (40 mph) or less
2nd → 1st	40 km/h (25 mph) or less