


PARTS FUNCTION

Ignition Switch

The three position ignition switch (1) is next to the right handlebar grip. At "ON," the engine will operate. In either "OFF" position the engine will not operate.

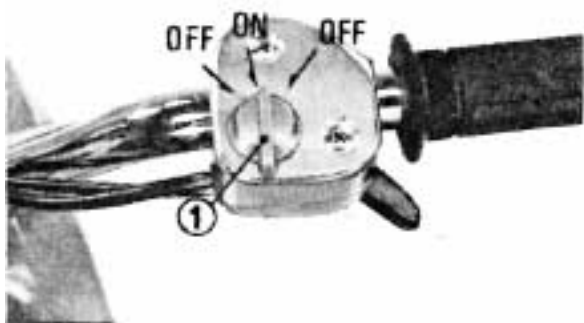


(1) Ignition switch

Headlight Switch

The headlight switch (1) is on the headlight case. Its operating positions are as follows:

| Position | Function |
|----------|----------------------------|
| OFF | Headlight is off. |
| LO | Headlight is on low beam. |
| HI | Headlight is on high beam. |

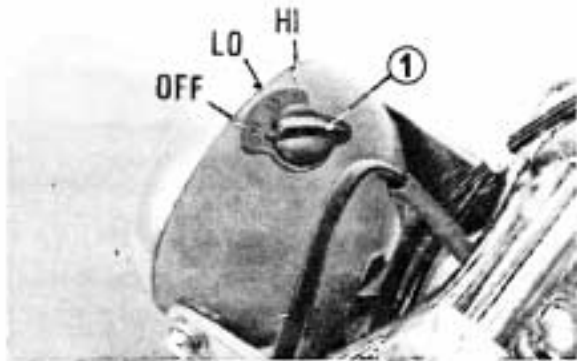

(1) Headlight switch