

## FUEL

### Fuel Valve

The three way fuel valve (1) is on the left side of the carburetor.

#### “OFF”

At “OFF”, fuel cannot flow from the tank to the carburetor. Turn the valve off whenever the ATC is not in use.

#### “ON”


At “ON”, fuel will flow from the main fuel supply to the carburetor.

#### “RES”

At “RES”, fuel will flow from the reserve fuel supply to the carburetor. Use the reserve fuel only when the main supply is gone. Refill the tank as soon as possible after switching to “RES”. The reserve fuel supply is 0.9ℓ (0.24 US gal).

#### NOTE:

\* Do not operate the machine with the fuel valve in the “RES” position after refueling. You may run out of fuel, with no reserve.

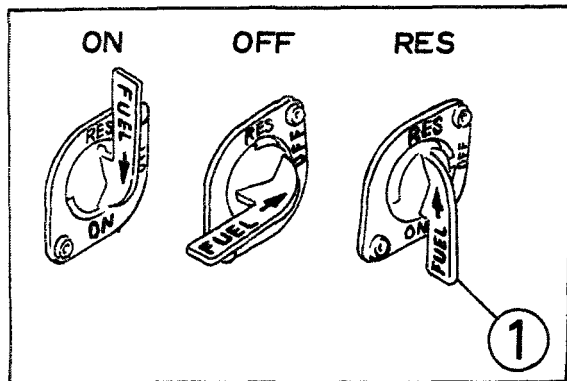

(1) Fuel valve