

BRAKES

Brake Pedal:


Free play, measured at the end of the pedal (1), should be 15–20 mm (5/8–3/4 in.).

Adjust by turning the adjusting nut (2) located on the brake operating rod at the rear of the frame.

Other Checks:

Check the brake cable for kinks or signs of wear that could cause sticking or failure.

Lubricate the brake cable with a commercially available cable lubricant to prevent premature wear or corrosion.

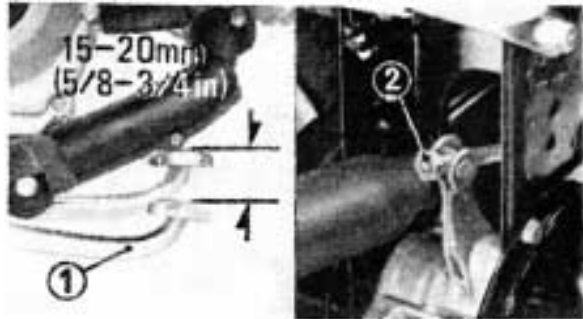


(1) Brake pedal

(2) Pedal adjusting nut

Make sure the brake arm, spring, rod and fasteners are in good condition.

Brake Lever/Parking Brake:

Free play, measured at the tip of the brake lever (3), should be within 15–20 mm (5/8–3/4 in.). Adjusting nuts (4) are located at the brake cable mount on the right side of the frame just behind the engine.

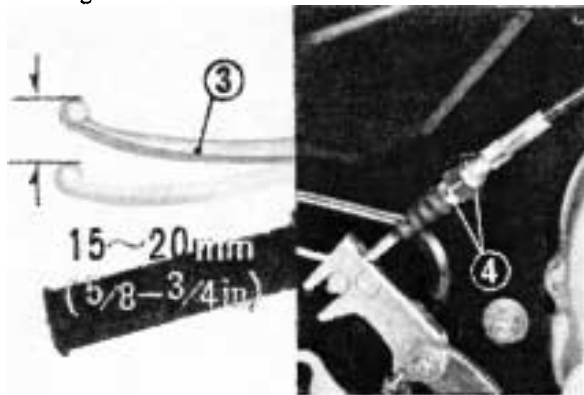

(3) Brake lever

(4) Lever adjusting nuts