


OIL FILTER SCREEN

1. Drain the engine oil.
2. Remove the right crankcase cover.
3. Remove the oil filter screen (1) from the crankcase.
4. Clean the oil filter screen.

Installation

- Reinstall the oil filter screen by reversing the disassembly sequence.
- Tighten the right crankcase cover bolts to 7–11 N·m (0.7–1.1 kg·m, 5–8 ft·lb) torque.

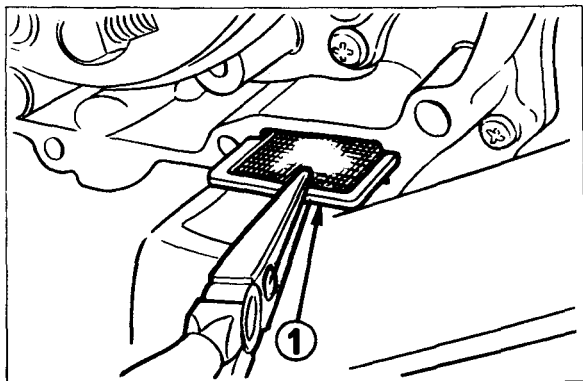

(1) Oil filter screen