


AIR CLEANER

The air cleaner element accumulates dust and must be cleaned periodically. If the ATC185S is ridden in unusually dusty areas, the element must be cleaned at more frequent intervals than specified in the MAINTENANCE SCHEDULE.

1. Remove the rear fender by sliding the lever (1).
2. Remove the three bolts (2) attaching the air cleaner case and remove the air cleaner tube upper (3) and lower (4) clamp.
3. Remove the air cleaner assembly from the frame.
4. Remove the filter element, wash it in non-flammable or high flash point solvent. Allow it to dry thoroughly.

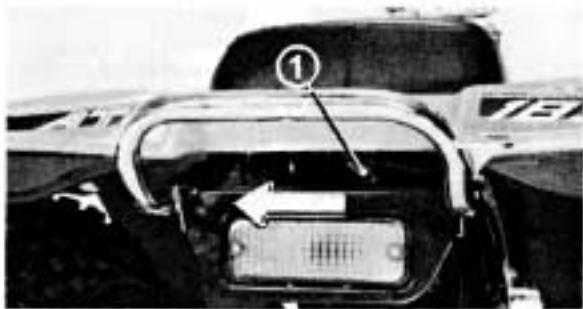


(1) Lever

5. Soak the filter element in clean gear oil (SAE 80–SAE 90) until saturated, then squeeze out the excess oil.
6. Reassemble by reversing the disassembly sequence.

WARNING

- * *Never use gasoline or low flash point solvents for cleaning the air cleaner element. A fire or explosion could result.*

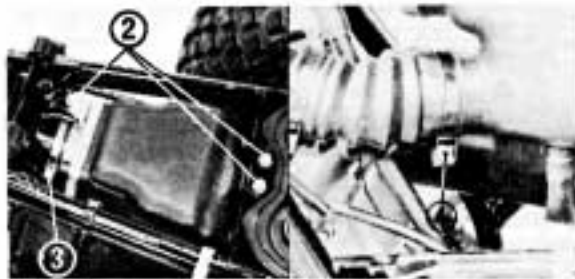

(2) Attaching bolts (3) Tube clamp (Upper)
(4) Tube clamp (Lower)