


12V DC Power Supply

The direct current receptacle (1) is on the left side of the headlight. It provides 12V DC power at a maximum of 60 watts (5Amps). The fuse for this power supply is located on the frame under the seat. The specified fuse is 5A.

WARNING

* *Never use a fuse with a different rating from that specified. Serious damage to the electrical system or a fire results.*

Accessories may be connected to the receptacle by using the special plug (2) that came with your ATC. To attach the special plug to the accessory:

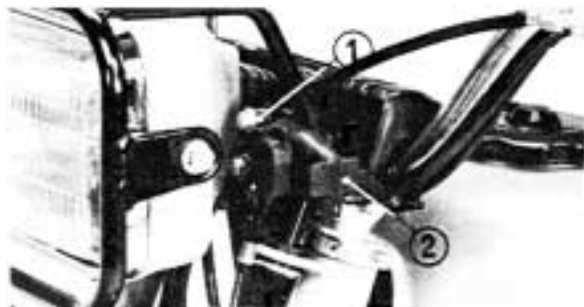

(1) Receptacle


1. Install the accessory leads to the plug, making sure to connect the positive and negative leads to the corresponding plug terminals.

CAUTION:

* *Do not install the positive and negative accessory leads in reverse when attaching them to the special plug.*

NOTE:

- * We recommend that you use AWG18–AWG20 electrical wire for attachment to the special plug.
2. With the ignition OFF, insert the plug into the plug receptacle, being careful not to twist the electrical leads coming from the accessory.

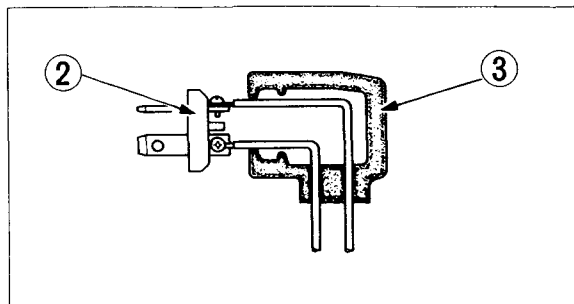

(2) Special plug

(3) Plug cover