

5. Remove the standard main jet and install the high altitude main jet. Reinstall the float chamber.
6. Install the carburetor. Make sure the drainscrew is turned fully clockwise and turn the fuel valve ON.
7. Start the engine. Adjust the idle speed.

NOTE:

- * Adjust the idle speed at high altitude to ensure proper high altitude operation.

Removal: If all your riding is below 6,500 ft (2,000 m).

1. Follow installation steps 1-4.
2. Reinstall the standard main jet.
3. Reinstall the carburetor. Adjust the idle speed .

NOTE:

- * Adjust the idle speed at low altitude to ensure proper low altitude operation.