

4. If adjustment is necessary, loosen the adjusting screw lock nut (5) and turn the adjusting screw (4) so that there is a slight resistance when the gauge is inserted.
5. After adjustment, tighten the lock nut while holding the adjusting screw to prevent it from turning.
6. Recheck the clearance to make sure that it has not changed.
7. Reinstall the timing mark cover and valve adjusting caps.



- (3) Feeler gauge                      (5) Lock nut  
(4) Adjusting screw