

## TRANSPORTING

1. Place the carburetor drain tube in a suitable container.
2. Turn the fuel cap lever and fuel valve OFF
3. Turn the drain screw counterclockwise to drain the gasoline from the carburetor.

### WARNING

- \* *Never incline the machine with the front wheel up, or rest it on its side without draining the fuel. Fuel vapor or spilled fuel may ignite.*
  - \* *Gasoline is flammable and is explosive under certain conditions. Do not smoke or allow flames or sparks near the equipment while draining fuel.*
4. After draining turn the drain screw clockwise.

### NOTE:

- \* Be sure the fuel drain is closed (screw turned clockwise) before refueling the ATC.
- \* It is unnecessary to drain the engine oil from the crankcase, as no appreciable oil leakage will occur when the ATC is rested on its side.

- \* If wheel removal is required when transporting, follow the procedures on following pages.