

I: Inspect and Clean, Adjust, Lubricate or Replace, if necessary C: Clean R: Replace A: Adjust L: Lubricate		INITIAL SERVICE PERIOD (First week of operation)	REGULAR SERVICE PERIOD (Every 30 operating days)	Refer to page
	FUEL LINE		I: (EVERY YEAR)	43
*	FUEL STRAINER		C: (EVERY YEAR)	43
	THROTTLE OPERATION		I	55
	DRIVE CHAIN	NOTE (2)	I	56
*	BRAKE SHOES		I: (EVERY YEAR)	52
	BRAKE SYSTEM		I	52
*	CLUTCH		A	51
*	SPARK ARRESTER		C	60
	ALL NUTS, BOLTS, FASTENERS		I	—
	LIGHTING EQUIPMENT		I	—
	TIRES		I	21
*	STEERING HEAD BEARING		A: (EVERY YEAR)	—

NOTE: (1) Replace every 30 operating days or every 3 months, whichever comes first.

(2) Service more frequently when riding in dusty areas.