


PARTS FUNCTION

Ignition Switch

The ignition switch (1) is on the handlebar upper holder.

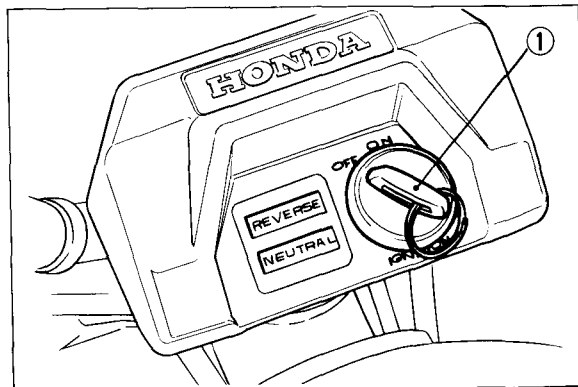

(1) Ignition Switch

| Key Position | Function | Key Removal |
|--------------|---|----------------------------|
| OFF | Engine and headlight cannot be operated. | The key can be removed. |
| ON | Headlight can be turned on. With the engine stop switch at RUN and transmission in neutral, the engine can be started. | The key cannot be removed. |