


Accessories may be connected to the receptacle by using the special plug (2) that came with your ATC. To attach the special plug to the accessory:

1. Install the accessory leads to the plug, making sure to connect the positive and negative leads to the corresponding plug terminals.

**CAUTION**

- \* Do not install the positive and negative accessory leads in reverse when attaching them to the special plug.

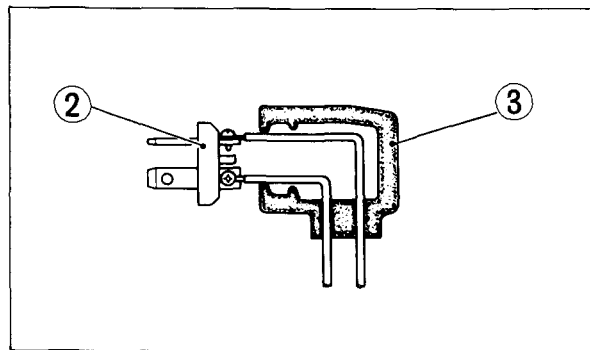

(2) Special plug

(3) Plug cover

**NOTE:**

- \* We recommend that you use AWG18–AWG20 electrical wire for attachment to the special plug.
- 2. With the ignition OFF, insert the plug into the plug receptacle, being careful not to twist the electrical leads coming from the accessory.

**WARNING**

- \* Make sure the ignition switch is OFF when inserting or removing the special plug.

**CAUTION**

- \* Keep the electrical leads insulated and away from hot engine parts and sharp edges.
- \* Do not use accessories not designed for 12V DC power.
- \* Make sure the electrical leads extend from the bottom of the plug when inserting it in the receptacle.
- 3. When the receptacle is not being used, cover it with the rubber cap that came with your ATC to keep out dust, water and sand.