

## PARTS FUNCTION

### Ignition Switch

The three position ignition switch (1) is under the headlight switch. At RUN, the engine will operate. In either OFF position the engine will not operate.




(1) Ignition switch

### Headlight Switch

The headlight switch (2) above the ignition switch and turns the headlight ON or OFF.

### Headlight Dimmer Switch

With the headlight switch (2) ON, use the dimmer switch (3) to select Hi for high beam or Lo for low beam.

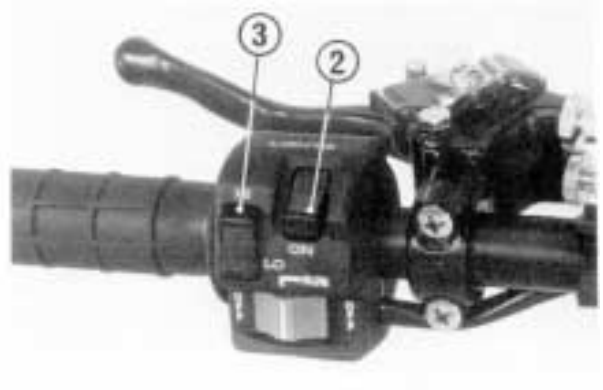

(2) Headlight switch (3) Headlight dimmer switch