


Starter Valve Lever

The starter valve lever (1) is on the left side of the carburetor. Lower the lever to position (A) opens the starter valve which allows the carburetor to deliver a rich mixture for starting the engine when cold. Raise the lever to position (B) as the engine attains normal operating temperature.

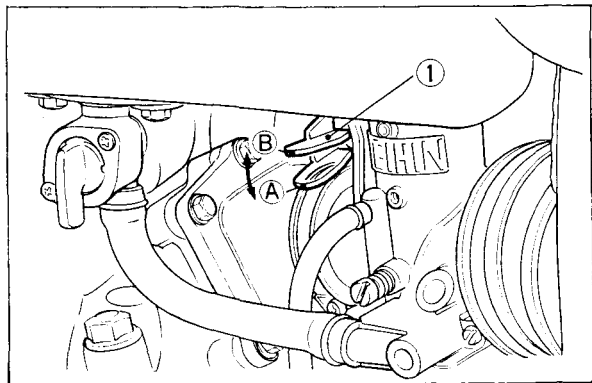

(1) Starter valve lever