


DRIVE CHAIN

The drive chain (1) will wear with use and requires periodic adjustment in accordance with the maintenance schedule.

NOTE:

* Check, adjust or lubricate the chain with the engine off.

Chain slack should be checked by measuring the amount of chain slack midway between the sprockets. The amount of slack should be 30–40 mm (1.2–1.6 in).

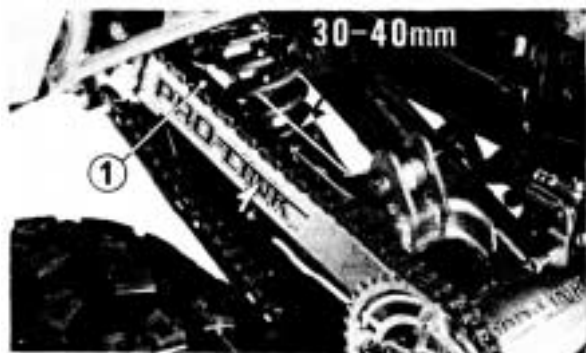


(1) Drive chain

To adjust slack, loosen two lock bolts (2). Turn the adjuster (4) to decrease or increase chain slack using the tool provided (3). After adjusting the chain slack 30–40 mm (1.2–1.6 in), retighten the lock bolts.

NOTE:

* If drive chain slack is excessive when the adjuster is moved to the limit of adjustment, the drive chain is worn and must be replaced. See your authorized Honda dealer to replace.

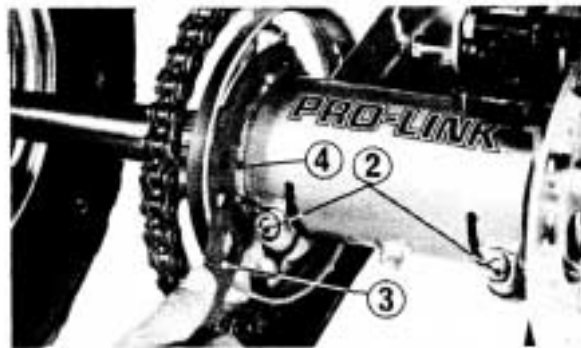

(2) Lock bolts
(3) Provided tool

(4) Adjuster