


“RES” position

This is the reserve fuel position. The reserve fuel capacity is 0.5 l (0.13 U.S. gal.). The fuel valve should be turned to this position only after the regular fuel supply is consumed. This serves as a warning to the rider that it is time to refill the fuel tank.

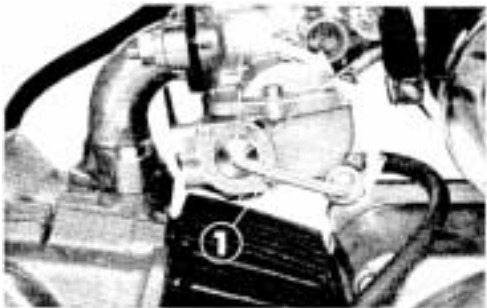

① Fuel valve lever

FUEL TANK AND FUEL TANK CAP

The fuel tank cap ② is removed by turning it counterclockwise. The fuel tank capacity including reserve fuel is 2.5 l (0.6 U.S. gal.). Use of low lead gasoline having a 91 octane rating or higher is recommended. If such gasoline is not available, use a leaded regular grade gasoline. Do not use a gasoline-oil mixture.



② Fuel tank cap