


recoil starter rope several times. When the engine is unflooded, turn the ignition switch on and repeat the normal starting procedure, but do not close the choke.

- In cold weather, leave the choke closed during the first several minutes after the engine starts and then gradually open the choke as the engine warms up.

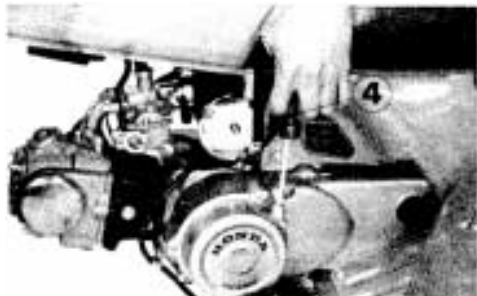

④ Recoil starter

NOTE :

Do not race the engine during the warm-up period. Revving a cold engine wastes fuel and causes rapid engine wear.

WARNING :

Exhaust gases contain poisonous carbon monoxide. Never run the engine in a closed garage or confined area.

BREAK-IN PROCEDURE

During the first few days of riding, operate your new ATC-70 so the engine neither pulls laboriously nor approaches maximum R.P.M. Avoid full throttle operation, and select your gear changes to spare the engine undue stress. Careful break-in procedure during initial operation will measurably extend the service life of the engine.