

## TOOL KIT

A spark plug wrench and handle are attached under the rear of the seat. Any extensive work requiring additional tools should be performed by an authorized Honda dealer.




- ① Spark plug wrench
- ② Wrench handle

## MAINTENANCE OPERATIONS

### ENGINE OIL LEVEL

Check engine oil level at the start of each day the ATC-70 is to be ridden. The oil filler cap contains a dipstick for measuring oil level.

Oil level should be checked with the

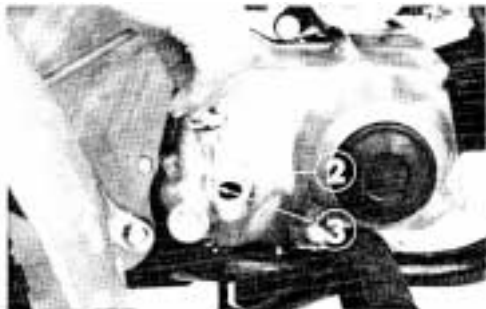

- ① Dipstick
- ② Upper level mark
- ③ Lower level mark