


The adjusting nut ② is located on the brake operating rod at the rear of the frame on the right side.

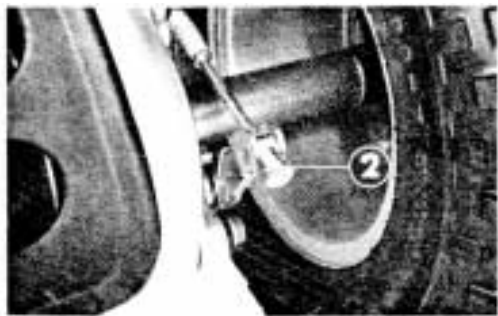


② Adjusting nut

DRIVE CHAIN ADJUSTMENT

The drive chain will wear through use and requires periodic adjustment. Adjustment is normally performed every 30 operating days, in accordance with the MAINTENANCE SCHEDULE.

Loosen the chain tensioner locking bolt ① and push the chain tensioner plate ② upward until resistance is felt. Retighten the locking bolt.

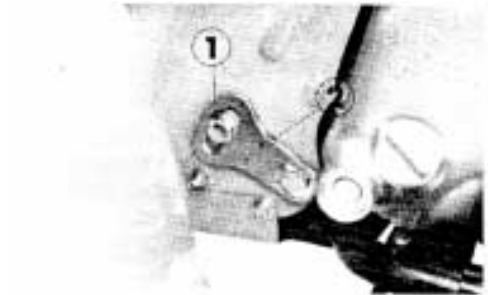

- ① Locking bolt
- ② Chain tensioner plate