


CAM CHAIN ADJUSTMENT


Too tight or too loose a cam chain will adversely affect the engine. Make tension adjustment while the engine is idling.

1. To adjust, loosen the lock nut ①, and loosen tensioner adjust bolt ② approximately one half turn.
2. If the chain is still noisy even after

the above adjustment, loosen the 14 mm sealing bolt ③ located on the left bottom side of the crankcase, and screw in the tensioner bolt ④ gradually until the cam chain becomes quiet. After completing the adjustment, tighten the tensioner adjust bolt, lock nut, and 14mm sealing bolt securely.

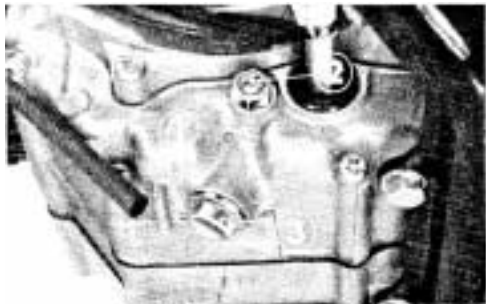

- ① Lock nut
- ② Tensioner adjust bolt
- ③ Sealing bolt

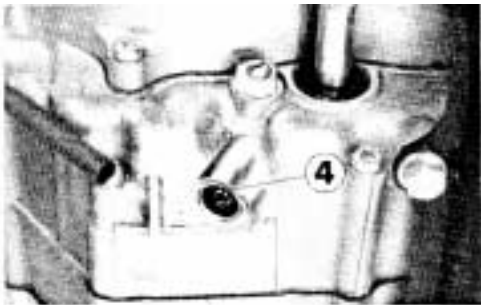

- ④ Tensioner bolt