

# CONTENTS

---

<b>SERIAL NUMBER LOCATIONS</b> .....	1	<b>PRE-RIDE INSPECTION</b> .....	16
<b>DESCRIPTION</b> .....	2	<b>STARTING THE ENGINE</b> .....	17
<b>OPERATING INSTRUCTIONS</b> .....	4	<b>BREAK-IN PROCEDURE</b> .....	19
Ignition Switch .....	4	<b>RIDING</b> .....	19
Rear Brake Lever .....	4	<b>PARKING</b> .....	19
Gear Change Pedal .....	5	<b>STORAGE</b> .....	20
Neutral Indicator .....	6	<b>MAINTENANCE</b> .....	21
Choke Lever .....	7	Maintenance Schedule .....	21
Fuel Valve .....	8	Tool Kit .....	23
Fuel Tank .....	9	<b>MAINTENANCE OPERATIONS</b> .....	24
Fuel Drain .....	10	Engine Oil level .....	24
Oil Recommendation .....	11	Engine Oil Change .....	24
Engine Oil Level .....	12	Brake Adjustment .....	26
Throttle Lever .....	12	Drive Chain Adjustment .....	27
Speed Limiter .....	13	Drive Chain Lubrication .....	28
Step Guard .....	14	Valve Clearance Adjustment .....	29
Tires .....	15		