


## TRANSPORTING THE ATC (Continued)

### Rear Wheel Removal

1. Place a support block under the vehicle and raise the rear wheel off the ground.
2. Loosen the wheel nuts (1) with a 12 mm socket wrench.
3. Remove the wheel.

### Installation Note:

Reassemble the rear wheels in the reverse order of disassembly, and torque the wheel nuts to 19-25 N·m (1.9-2.5 kg-m, 14-18 ft-lb).

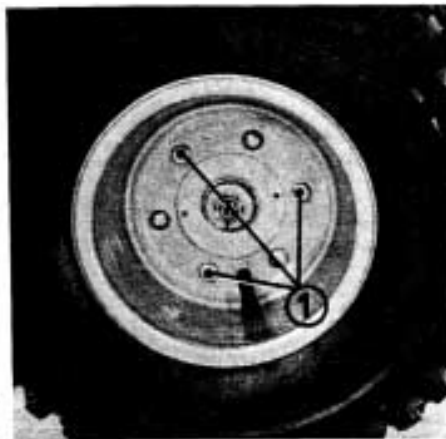

① Wheel nuts