

MAINTENANCE OPERATIONS	37
Engine Oil Level	37
Engine Oil Change	37
Brake Adjustment	39
Drive Chain Adjustment	40
Drive Chain Lubrication	41
Valve Clearance Adjustment	42
Contact Breaker Point Gap and Ignition Timing Adjustment	44
Spark Plug Replacement and Adjustment	45
Air Cleaner Maintenance	46
Throttle Cable Inspection and Adjustment	47
Carburetor Adjustment	48
Fuel Strainer Maintenance	49
Cam Chain Adjustment	50

Clutch Adjustment	51
Spark Arrester Maintenance	52
TRANSPORTING THE ATC	53
Fuel	53
Removing and Installing the Rear Wheels	54
Removing the Front Wheel	55
Installing the Front Wheel	56
STORAGE	57
OPTIONAL PARTS	58
NOISE EMISSION CONTROL SYSTEM (USA ONLY)	59
SPECIFICATIONS	60
WIRING DIAGRAM	61
WARRANTY SERVICE	64