

SPARK ARRESTER MAINTENANCE

The exhaust system spark arrester must be periodically purged of accumulated carbon.

1. Remove the spark arrester bolt ① and slide the spark arrester ② out.

⚠ WARNING

The exhaust system becomes **VERY HOT** even after short periods of engine operation.

2. Clean the arrester of accumulated carbon.
3. Start the engine, and purge accumulated carbon from the system by momentarily revving up the engine several times.

⚠ WARNING

To avoid fire hazards, **DO NOT** perform this maintenance in the vicinity of flammable materials.

4. Stop the engine and allow the exhaust pipe to cool.
5. Reinstall the spark arrester with the bolt.



① Spark arrester bolt ② Spark arrester