
STORAGE

To store the ATC:

1. Completely clean all parts of the ATC. If the ATC has been exposed to sea breeze or salt water, wash it with fresh water and wipe dry.
2. Drain the gasoline from the fuel tank and the carburetor.

WARNING

- * **Gasoline is flammable and is explosive under certain conditions. Do not smoke or allow flames or sparks near the equipment while draining fuel.**
3. Change the engine oil.
 4. Position the piston at the top of the compression stroke. This can be determined by pulling the starter rope until compression is felt.

5. Inflate the tires to the normal pressure and place the ATC on suitable blocks to raise the tires off the ground.
6. Cover the ATC with a dust cover (don't use plastic or other coated material).
7. Store in an area which is free of humidity and dust.