

## FUEL VALVE

The fuel valve ① is on the left side of the carburetor.

### OFF position


In OFF, the fuel flow will be cut off. Whenever the vehicle is not in use, set the valve to this position.

### ON position

In ON, fuel will flow to the carburetor. When the engine is to be operated, set the valve to this position.

### RES position

The fuel valve should be set to RES only after the regular fuel supply has been consumed. The reserve capacity is approximately 0.8 liter (0.2 US gal). When it becomes necessary to switch to RES the rider should refill the fuel tank.

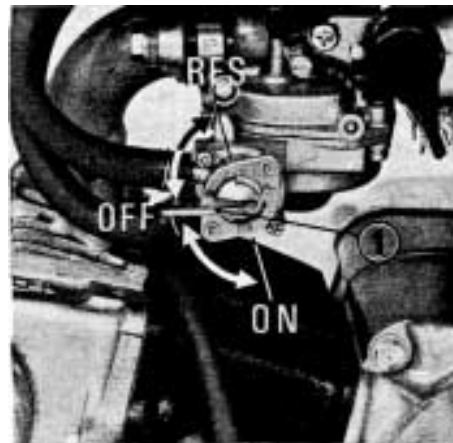

① Fuel valve