


OPERATING INSTRUCTIONS

MAIN/HEADLIGHT SWITCH

The main/headlight switch ① is located on the headlight case. Its operating positions are as follows:

Position	Function
OFF	Engine cannot be started.
I	Engine can be started. Light will be off.
II	Engine can be started. Light will be on.

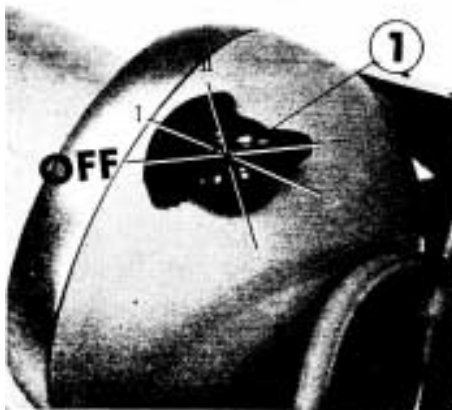

① Main/headlight switch

EMERGENCY SWITCH

The emergency switch ① (page 5) is located on the right handle grip. Engine can be started by placing this switch in "ON" position with the main/headlight switch in "I" or "II" position. In "OFF" position, engine cannot be started. Turn this switch "OFF" when the engine has to be stopped as soon as possible.