


CAUTION:

- * Removing the battery caps can damage the caps and result in leaks and eventual battery damage.
- * When the motorcycle is to be stored for an extended period of time, remove the battery from the motorcycle and charge it fully. Then store it in a cool, dry place. If the battery is to be left in the motorcycle, disconnect the negative cable from the battery terminal.

Battery Removal

1. Remove the seat (page 36).
2. Disconnect the negative (-) terminal lead (1) from the battery.
3. Remove the battery cover (2).
4. Disconnect the positive (+) terminal lead (3) from the battery.
5. Pull out the battery (4) from the battery box.

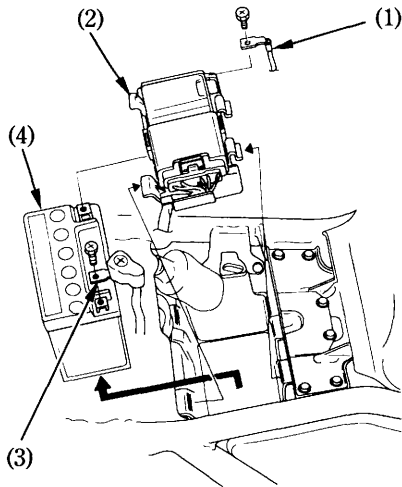

- (1) Negative (-) terminal lead
- (2) Battery cover
- (3) Positive (+) terminal lead
- (4) Battery