




Adjust by turning the rear brake adjusting nut a half-turn at a time. Make sure the cut-out on the adjusting nut is seated on the brake arm pin (5) after making final freeplay adjustment.


4. Apply the brake several times and check for free wheel rotation after the brake pedal is released.

If proper adjustment cannot be obtained by this method, see your dealer.

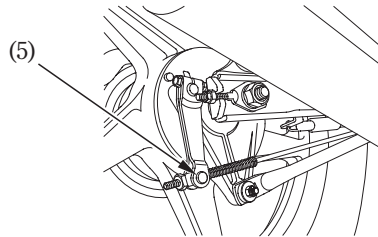

(5) Brake arm pin

After adjustment, push the brake arm (6) to confirm that there is a gap between the rear brake adjusting nut (4) and the brake arm pin (5).

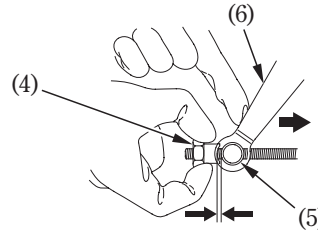

(4) Rear brake adjusting nut (6) Brake arm
(5) Brake arm pin

After adjustment, confirm the freeplay of the rear brake pedal.

Other Checks:

Make sure the brake rod, brake arm, spring and fasteners are in good condition.

