



### **RIGHT SIDE COVER**


The right side cover must be removed for battery and main fuse maintenance.

#### Removal:

1. Remove the screw (1).
2. Carefully pull the side cover (2) out from the grommets (3).

#### Installation:

1. Align the prongs with the rubber grommets.
2. Push the prongs in.
3. Install the screw.

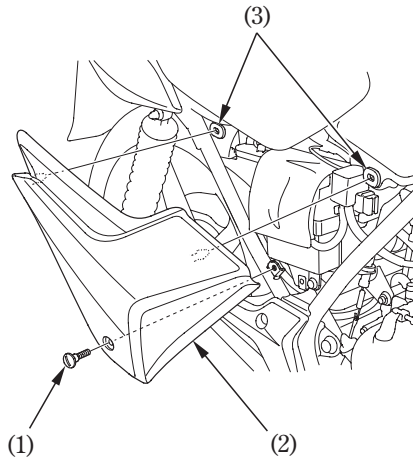

(1) Screw  
(2) Side cover

(3) Grommets

