





## WHEEL REMOVAL

Refer to the Safety Precautions on page 65 .

### Front Wheel Removal (Type II)

1. Place the motorcycle on its center stand.
2. Raise the front wheel off the ground by placing a support block under the engine.
3. Remove the speedometer cable (1) by removing the screw (2).
4. Remove the front axle nut cap (3).
5. Remove the front axle nut (4).
6. Remove the front axle shaft (5), front wheel and side collar.

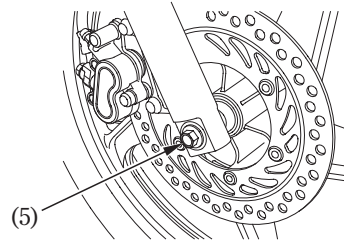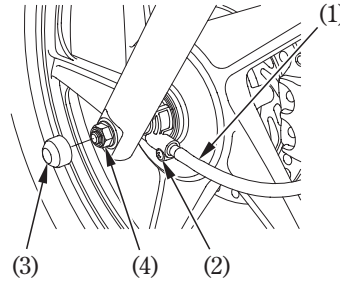

- |                        |                      |
|------------------------|----------------------|
| (1) Speedometer cable  | (4) Front axle nut   |
| (2) Screw              | (5) Front axle shaft |
| (3) Front axle nut cap |                      |

