




Front Wheel Installation (Type II)

1. Install the side collar into the right side wheel hub.
2. Position the wheel between the fork legs and insert the front axle shaft from the right side, through the right fork leg and wheel hub.
3. To avoid damaging the brake pads while installing the wheel, carefully fit the brake disc between the pads.
4. Make sure that the lug (1) on the fork leg is located in the slot (2) on the speedometer gearbox (3).
5. Tighten the front axle nut to the specified torque.
Front axle nut torque:
59 N·m (6.0 kgf·m , 44 lbf·ft)
6. After installing the wheel, apply the brake several times and then check if the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.
7. Install the speedometer cable and tighten the screw securely.
8. Install the front axle nut cap.

If a torque wrench is not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.

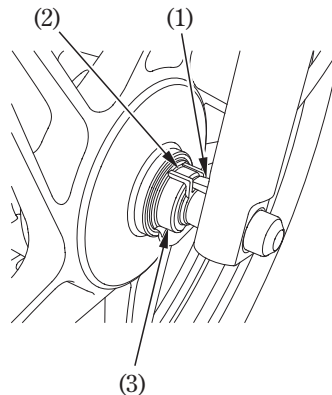

(1) Lug
(2) Slot

(3) Speedometer gearbox

