



Do not depress the brake lever when the caliper assembly is removed. The caliper pistons will be forced out of the cylinders with subsequent loss of brake fluid. If this occurs, servicing of the brake system will be necessary. See your Honda dealer for this service.

5. Remove the axle bolt (6), and then loosen the right and left axle pinch bolts (7).
6. Remove the front axle shaft (8), front wheel and side collars.

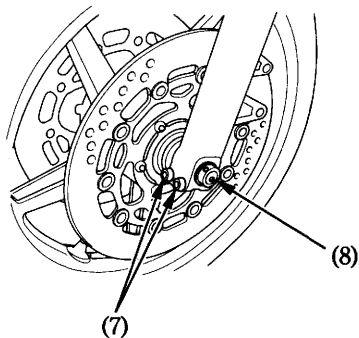

- (7) Axle pinch bolts  
(8) Front axle shaft

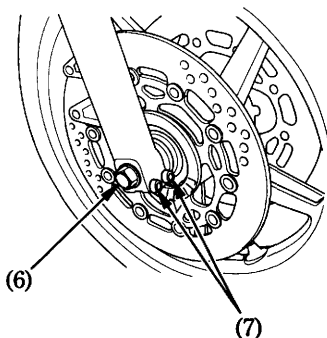

- (6) Axle bolt