

<b>(Ref. No.) Description</b>	<b>Function</b>
(1) Speedometer	Shows riding speed.
(2) Odometer	Shows accumulated mileage.
(3) Neutral indicator (green)	Lights when the transmission is in neutral.
(4) Side stand indicator (amber)	Lights when the side stand is put down. Before parking, check that the side stand is fully down; the light only indicates the side stand ignition cut—off system (page 33) is activated.
(5) Turn signal indicator (amber)	Flashes when either turn signal is operated.
(6) High beam indicator (blue)	Lights when the headlight is on high beam.
(7) Tripmeter	Shows mileage per trip.
(8) Tripmeter reset knob	Resets tripmeter to zero (0). Turn knob in direction shown.
(9) Tachometer	Shows engine rpm.
(10) Tachometer red zone	<p>Never allow the tachometer needle to enter the red zone, even after the engine has been broken in.</p> <p><b>CAUTION:</b></p> <p>* <b>Running the engine beyond recommended maximum engine speed (tachometer red zone) can damage the engine.</b></p>