


To replace fuses in the fuse box (3), remove the seat (see page 31), fuse box cover (6) and old fuse.

Install a new fuse and fuse box cover.


**▲ WARNING**

**\* Never use a fuse with a different rating from that specified. Serious damage to the electrical system or a fire may result, causing a dangerous loss of lights or engine power.**

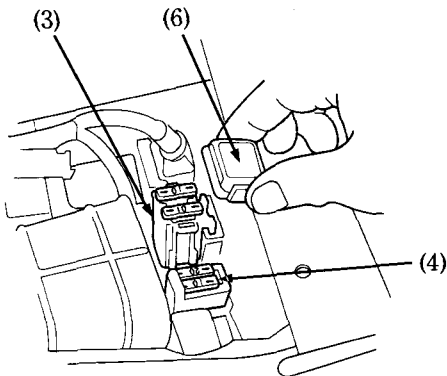

(3) Fuse box  
(4) Spare fuses

(6) Fuse box cover

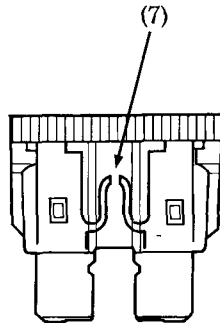

(7) Blown fuse