


ESSENTIAL INDIVIDUAL COMPONENTS

IGNITION SWITCH

The ignition switch (1) is beside the speedometer.

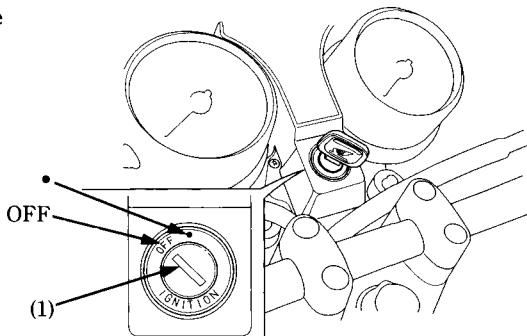

(1) Ignition switch

Key Position	Function	Key Removal
OFF	Engine and lights cannot be operated.	Key can be removed
● (ON)	Headlight, taillight and instrument lights are on and other lights can be operated. Engine can be started.	Key cannot be removed