

## **CONTENTS** //

|   |           |
|---|-----------|
| <b>SERIAL NUMBER LOCATION</b> .....           | <b>5</b>  |
| <b>CONTROL LOCATION</b> .....                 | <b>6</b>  |
| <b>OPERATING INSTRUCTIONS</b> .....           | <b>13</b> |
| <b>Instruments and Indicator Lights</b> ..... | <b>13</b> |
| <b>Main Switch</b> .....                      | <b>15</b> |
| <b>Ignition Switch</b> .....                  | <b>16</b> |
| <b>Starter Button</b> .....                   | <b>16</b> |
| <b>Headlight Switch</b> .....                 | <b>16</b> |
| <b>Headlight Dimmer Switch</b> .....          | <b>17</b> |
| <b>Turn Signal Switch</b> .....               | <b>17</b> |
| <b>Horn Button</b> .....                      | <b>17</b> |
| <b>Seat Lock and Helmet Holder</b> .....      | <b>18</b> |
| <b>Document Compartment</b> .....             | <b>18</b> |
| <b>Steering Lock</b> .....                    | <b>19</b> |
| <b>Rear Shock Absorber</b> .....              | <b>19</b> |
| <b>FUEL AND OIL</b> .....                     | <b>20</b> |
| <b>Fuel Valve</b> .....                       | <b>20</b> |
| <b>Fuel Tank</b> .....                        | <b>21</b> |
| <b>Engine Oil Recommendation</b> .....        | <b>22</b> |
| <b>Viscosity</b> .....                        | <b>22</b> |