



5. Clean any sludge from the center of the oil filter rotor ③.
6. Remove the filter screen ④ for cleaning. Wash the filter screen ④ in clean solvent and then install.
7. Reassemble in the reverse order of disassembly. If the crankcase cover gasket is damaged, replace it with a new gasket.

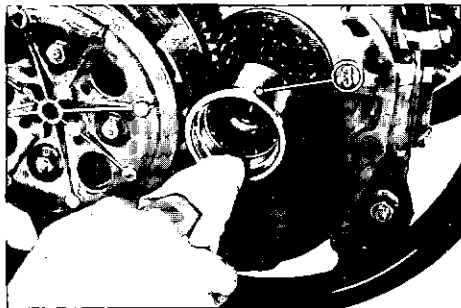

**NOTE:**

- When assembling the oil filter cap and the oil filter rotor ensure that a cap rib ⑦ is aligned with the rotor index mark ⑥.

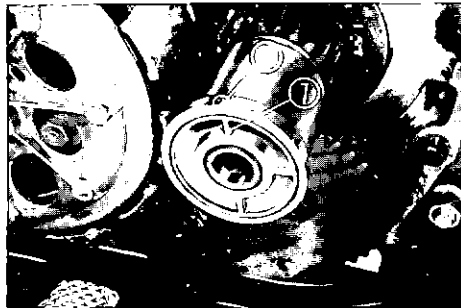

⑥ Index mark      ⑦ Rib