


contact breaker points (② or ③) opens to maximum clearance. Check gap and adjust if necessary.

6. Lubricate the breaker point cam ① with a thin film of grease.

**NOTE:**

Contact breaker point gap adjustment will affect ignition timing. Ignition timing must be checked after point gap adjustment.

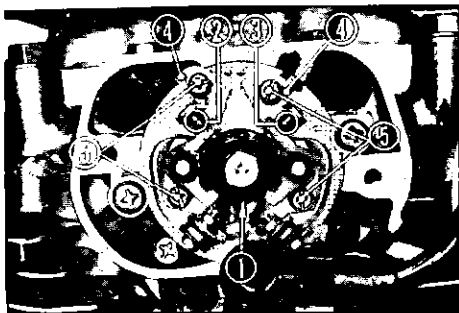

- ① Point cam
- ② L/H contact breaker point
- ③ R/H contact breaker point
- ④ Contact breaker plates
- ⑤ Contact breaker plate locking screws