



## Fuel Filter Maintenance

The fuel filter is incorporated in the fuel valve ① which is mounted on the bottom of the fuel tank at the left side. Accumulation of dirt in the filter will restrict the flow of fuel and cause the carburetors to malfunction; therefore, the fuel filter should be serviced periodically.

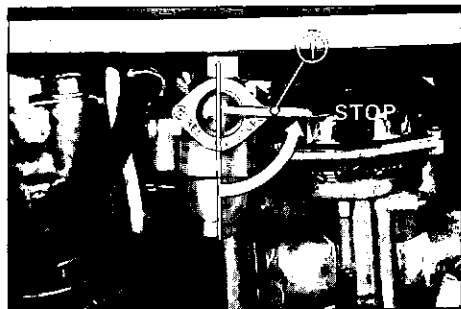

① Fuel valve

Turn fuel valve to "STOP" position and unscrew the filter cup ②. Remove the O-ring seal ③ and the filter screen ④ can be lifted out. Wash the filter screen in solvent and reassemble. Turn the fuel valve to "ON" position and check for leaks.

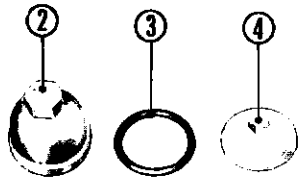

② Filter cup

③ O-ring seal

④ Filter screen