


### Brake pads:

Brake pad wear will depend upon the severity of usage, type of driving, and condition of the roads. It may be expected that the pads will wear faster on dirty and wet roads. Inspect the pads visually during all regular service intervals to determine the pad wear. The wear of the pad can be determined by measuring the inside clearance between the face of the caliper housing and the brake disc by pressing the inner housing toward the disc. If clearance is less than **0.12 in. (3.0 mm)**, replace both pads with a new set.

### **NOTE:**

Use only genuine Honda replacement friction pads offered by authorized Honda dealers. When service is necessary on the brakes, consult your Honda dealer.

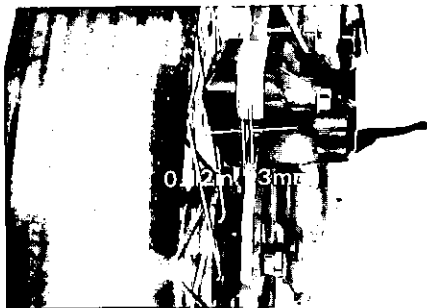

### 《CB360》

The CB360 front brake is a drum type.

### Adjustment:

1. Raise the front wheel off the ground by placing a support block under the engine, spin the front wheel by hand and measure the amount the front brake lever ① must be moved before the brake starts to take hold. The lever free play ② should be **0.8–1.2 in.**