



- ① Battery    ② Filler caps  
③ Upper level mark    ④ Lower level mark

### Battery removal and installation:

The battery should be removed for prolonged storage, or for recharging if electrolyte specific gravity falls below 1.200 @ 68° F (20°C).

1. Remove battery retainer and disconnect the ground (-) cable connection first and then the positive (+) cable. The battery can now be lifted

from its mounting. Note the positioning of the cables, protective rubber (+) terminal cover and battery mount rubber pads as well as the routing of the battery vent tube. Before installing the battery, clean the battery and its mounting area with water. Baking soda and water can be used to remove any existing corrosion.

2. Battery installation is performed in the reverse order of removal. Pay particular attention to the battery rubber mounts pads and the vent tube routing. Connect the positive (+) terminal with the rubber insulator first and then connect the negative (-) terminal.

### **CAUTION:**

When installing the battery, be careful not to bend or twist the vent tube.