


place a recommended fuse or serious damage to the electrical system of your motorcycle will result.

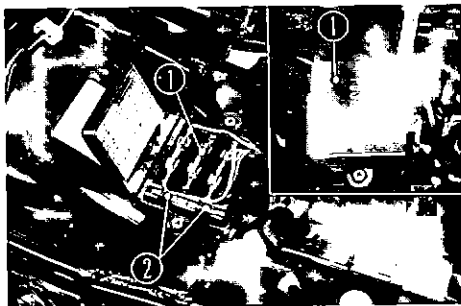

① Fuse box ② Spare fuses

Front Wheel Removal

《CB360G》

1. Raise the front wheel off the ground by placing a support under the engine.
2. Remove the speedometer cable from the front wheel hub assembly.
3. Remove the axle holder nuts and axle holders and the front wheel assembly.
4. To install the front wheel assembly, reverse the removal procedure.

NOTE:

Do not depress the brake lever when the wheel is off the motorcycle because the caliper piston will be forced out of the cylinder with subsequent loss of brake fluid. If this does occur servicing of the brake system will be necessary.