


Headlight Bulb Replacement


1. Remove the two headlight fixing screws and remove the headlight from the headlight case.
2. Remove the two retaining lock pins ① and screws ② from the headlight rim.
3. Remove the beam adjusting screw ③ from the headlight rim.
4. Remove the sealed beam unit from the headlight rim.

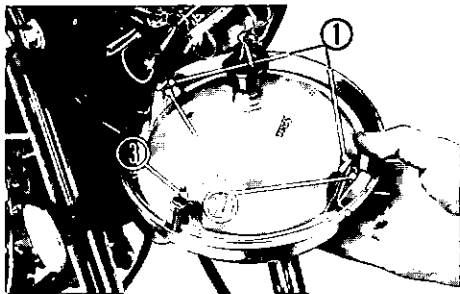

- ① Lock pins ② Lock screws
③ Beam adjusting screw

Tail/Stoplight Bulb Replacement

1. Remove the two screws retaining the tail/stoplight lens.
2. Press the bulb ① inward (direction A) and twist to the left (direction B) and the bulb can be removed to C.
3. Replace with a good bulb.
4. When installing the taillight lens, do not overtighten the screws, as this may damage the lens.

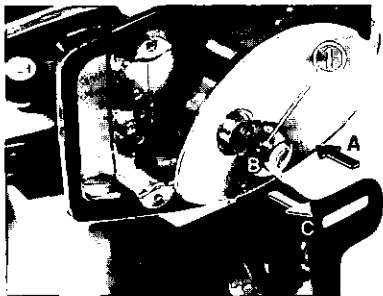

- ① Tail/stoplight bulb