



Indicators



PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)

Comes on briefly when the ignition switch is turned ON with the engine stop switch in the RUN position.

If it comes ON while engine is running: ➔ P.75



Low oil pressure indicator

Comes on when the ignition switch is turned ON. Goes off when the engine starts.

If it comes ON while engine is running: ➔ P.75



High coolant temperature indicator

If it comes ON while engine is running: ➔ P.74



ABS (Anti-lock Brake System) indicator (CB400A only)

Comes on when the ignition switch is turned ON. Goes off when your speed reaches approximately 10 km/h (6 mph).

If it comes ON while riding: ➔ P.76

