


N Neutral indicator

Comes ON when the transmission is in Neutral.

HISS indicator → P.73

- Comes on briefly when the ignition switch is turned ON with the engine stop switch in the RUN  position. Goes off if the ignition key has the correct coding.
- Flashes every 2 seconds for 24 hours when the ignition switch is turned OFF.

High beam indicator

Right turn signal indicator

Left turn signal indicator

