



Engine Oil ► Changing Engine Oil & Filter

7. Apply a thin coat of engine oil to the rubber seal of a new oil filter.
8. Install a new oil filter and tighten.

Torque: 26 N·m (2.7 kgf·m, 19 lbf·ft).

9. Replace the sealing washer. Install the drain bolt and tighten.

Torque: 30 N·m (3.1 kgf·m, 22 lbf·ft).

10. Fill the crankcase with the recommended oil (►P.38) and install the oil fill cap.

Required oil

When changing oil & engine oil filter:

3.2 litres (3.4 US qt, 2.8 Imp qt)

When changing oil only:

3.0 litres (3.2 US qt, 2.6 Imp qt)

11. Check the oil level. ►P.49

12. Check that there are no oil leaks.

NOTICE

Improper installation of the oil filter can result in serious damage to the engine.