


Other Adjustments ► Adjusting the Front Suspension

Adjusting the Front Suspension

Spring Preload

You can adjust the spring preload by the adjuster to suit the load or the road surface. Turn clockwise to increase spring preload (hard), or turn counterclockwise to decrease spring preload (soft). The standard position is the third groove from the top aligns with the top surface of the fork cap.

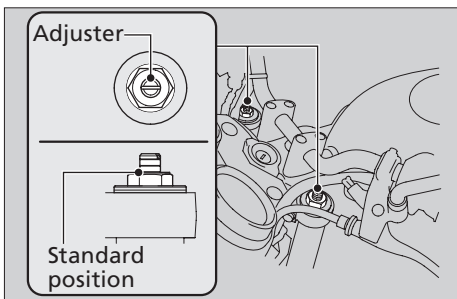

NOTICE

Do not turn the adjuster beyond its limits.
Adjust both left and right forks to the same spring preload.