



## Electrical Trouble ► Blown Fuse

### ■ Main Fuse

1. Remove the left side cover. P.46
2. Disconnect the wire connector of the starter magnetic switch.
3. Pull out the main fuse and check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
  - Spare main fuse is provided under the starter magnetic switch.

4. Connect the wire connector of the starter magnetic switch.
5. Install the left side cover.

#### NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your motorcycle inspected by your dealer.

Troubleshooting

